


(6)

Assemble the Treadle by joining the V of the treadle with the  $1\frac{1}{4}$ " screw, and complete with the treadle plate - attach with four  $\frac{3}{4}$ " screws. Hang the treadle assembly between the leathers on the front legs. Attach at each end with a 1" Round Head screw with a small washer on either side of the leather. It will be possible to attach through the lowest hole directly, but if it is desired to raise the treadle by fixing to one of the other holes, you may need to unscrew the leather from the leg and screw it back on again after the treadle pivot screws are inserted.

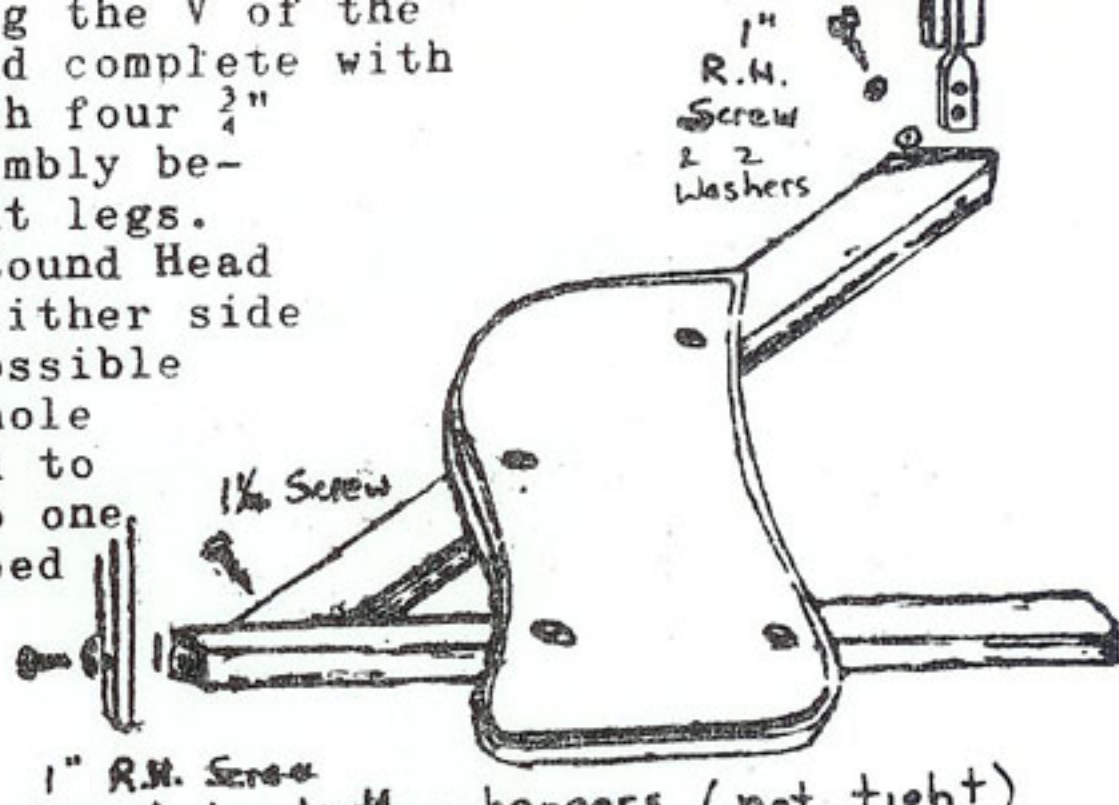

1" R.H. Screw  
and washers - through leg leather hangers (not tight)

(7)

Line up the square end of the twisted steel connector piece of the footman connecting bar and hold in place with the 1" screw

(8)

Slide the top of the footman bar onto the crank, add a steel washer and hold in place with the little "c" clip. Attach the leather at the lower end to the angle treadle bar and hold in place at a convenient pedalling angle with a 1" round head screw and two small washers. This angle may later be adjusted to get a comfortable heel-and-toe push-pull power stroke.